

A Technical Supplement from Bullseye Glass Co.

Knowing Your Kiln

To achieve control in firing glass, it is necessary to understand how heat is distributed within the kiln you are using. Kiln heat is rarely even. Top-fired kilns tend to be hotter in the center. Side-fired kilns are frequently hotter around the perimeter. The pyrometer reads only one point within the kiln chamber and may not give you an accurate indication of the heat treatment the glass is receiving. In working with a new kiln, making a few preliminary tests will help you to understand the kiln's heating patterns and gain better control over your results.

TESTING THE "LOW END"

At the low end of the temperature range—generally below 1200°F (649°C)—you will be slumping, bending and/or annealing the glass. Understanding heat distribution in this temperature range will be important for two reasons:

For bending and slumping: The heat pattern in the kiln will determine how and where to set up the project.

For annealing: The heat pattern will determine whether the kiln can properly anneal projects that cover a large area within the kiln chamber. If heat distribution in the kiln is uneven, large projects may break, due to annealing strain.

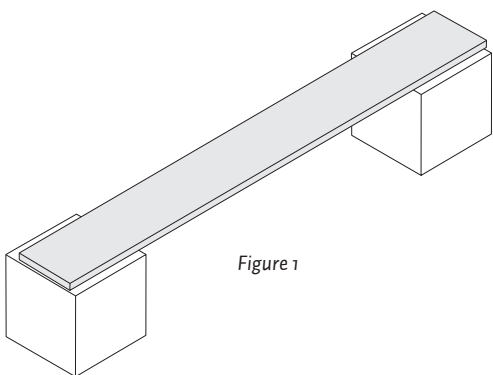


Figure 1

Figure 1 shows a 6" x 3/4" x 1/8" (152mm x 19mm x 3mm) strip of glass suspended over two 1" (25mm) tall mullite blocks. On a 20" (508mm) square kiln shelf, 13 such set-ups should be spaced evenly over the surface of the shelf. Use the same style of glass, preferably all from the same sheet or production date, for all 13 set-ups. (See Figure 2 for arrangement.)

Fire the kiln, using this schedule:

| | RATE | TEMPERATURE | HOLD |
|---|---------------|----------------|------|
| 1 | 500°F (278°C) | 1000°F (538°C) | :05 |
| 2 | 300°F (167°C) | 1150°F (621°C) | :05 |

Allow kiln to cool below 700°F (371°C) with the door closed. No annealing necessary.

READING THE RESULTS

If the glass strips around the perimeter are more deeply slumped than those in the center of the kiln, the perimeter is heating more than the center. (Figure 2)

If, instead, the center strips show a greater curve, the center is the area of greater heat work.

If all strips are equally slumped, the kiln is firing evenly.

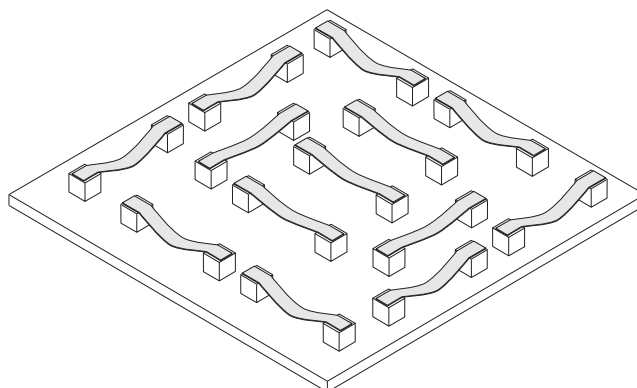


Figure 2

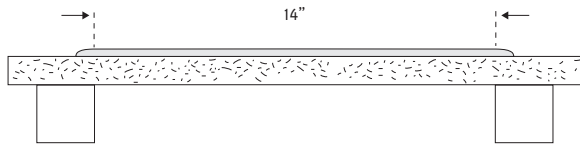


Figure 3

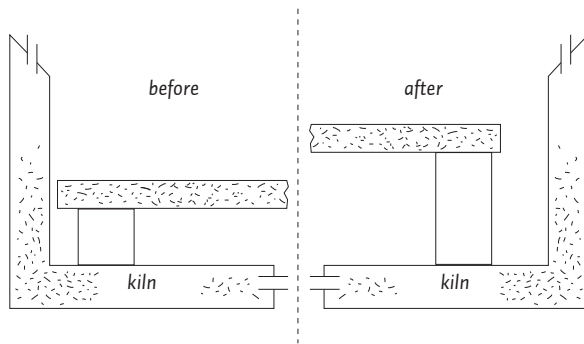


Figure 4

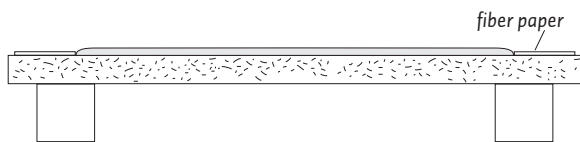


Figure 5

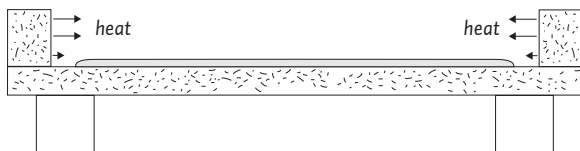


Figure 6

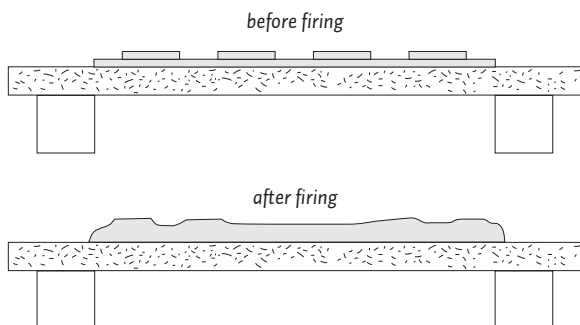


Figure 7

CORRECTING FOR UNEVEN HEATING

If the test results indicate that your kiln is firing unevenly, you can choose from the following actions to correct the problem:

1. Use a slower firing cycle.
2. Reduce the size of the glass project relative to the size of the kiln shelf. For example, rather than covering the full 20" (508mm) width of a shelf with a piece, limit the dimensions of the piece to 14" (356mm). (Figure 3)
3. Reduce the size of the kiln shelf and raise it further off the kiln floor to allow greater heat circulation around the shelf and the piece. (Figure 4)

If the test results indicate that the outer edges of the kiln are cooler than the center, try the following:

1. Insulate the edges of the glass piece with ceramic fiber paper, blanket, or board. This will slow down heat release from the edges. (Figure 5)
2. Create a perimeter wall of hard brick around the outer edges of the piece. Upon heating, the hard brick will absorb heat. Upon cooling, this absorbed heat will radiate back toward the glass and prevent its edges from cooling too rapidly. (Figure 6)

If the test results show an asymmetrical heating pattern (i.e., some areas along the perimeter of the kiln are hotter relative to the center, while others are colder), the elements within the kiln may not be firing properly. Turn the kiln to full fire and observe the elements. Are they glowing equally? If not, they will need either to be replaced or repositioned.

Note: Coiled-wire heating elements, if not properly secured to the kiln walls or ceiling, have a tendency to move, bunching up in corners or at the ends of the elements. The elements also tend to become brittle with prolonged use and may break or weaken if manipulated while cold.

Caution: Adjusting kiln elements is best done when the elements are hot (the power having just been disconnected). Such adjustments should be made only by qualified kiln technicians. In some cases, it may be most sensible to replace the elements. Make certain that replacement elements are secured in such a fashion that they are unlikely to move within the element grooves or along the element hangers.

UNDERSTANDING THE “HIGH END”

At the high end of the temperature range, where fusing occurs, you may get different results within different areas of the kiln, due to:

- The type of kiln (top- or side-fired)
- The type of kiln insulation (brick or refractory fiber)
- Kiln power and rate of heating
- Soak time
- The size of the shelf relative to the size of the kiln.

In a top-fired kiln, the corners or perimeter of the shelf are frequently colder than the center. Since the center of the kiln fires hotter than the edges or corners, the finished piece may have an uneven surface. (Figure 7)

With a side-fired kiln, the opposite is likely to occur. The temperature will be higher around the perimeter of the shelf than in the center. This faster firing at the edges can cause bubbles by trapping air between layers of glass and/or cause thin, ragged edges (“needle-pointing”). (Figures 8, 9)

FINDING OUT HOW YOUR KILN FIRES AT ITS HIGH END

By using an external, hand-held pyrometer and taking thermocouple readings at the middle and edges of your kiln, you can get a general idea of the heating differential within your kiln. (Figure 10)

You can get a more thorough understanding of your heating differential by performing the following test:

Assemble 5 stacks of test tiles, using Bullseye Clear (001101-0030F), Black (000100-0030F) and White (000113-0030F) glass. The bottom 2 layers should be 3” (76mm) square Clear tiles; the center layer, a 1” x 3” (25mm x 76mm) strip of Black; the next layer, a 1” x 3” (25mm x 76mm) strip of White; and the top layer, a 1/2” (13mm) square Black tile. (Figure 11)

Optional: By placing frits, stringers, or chips of other glass on the corners, you can learn more about the behavior of these materials at full fusing temperatures.

Place the tiles directly on the primed kiln shelf as shown in Figure 12. Do not place the tiles on fiber paper, as they will stick to the fiber and that will influence the test result. (Figure 12)

Fire the kiln at 1500°F (816°C) for 10 minutes, using this cycle:

| | RATE | TEMPERATURE | HOLD |
|---|---------------|----------------|------|
| 1 | 500°F(278°C) | 1000°F (538°C) | :05 |
| 2 | 600°F (333°C) | 1500°F (816°C) | :10 |
| 3 | AFAP* | 960°F (516°C) | :30 |
| 4 | 200°F (93°C) | 700°F (371°C) | :30 |
| 5 | AFAP* | 70°F (21°C) | :00 |

*As fast as possible.

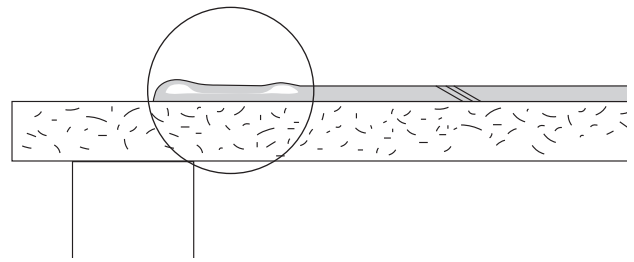


Figure 8: Cutaway showing Bubbles caused by faster fusing of the edges and consequent air entrapment between layers.

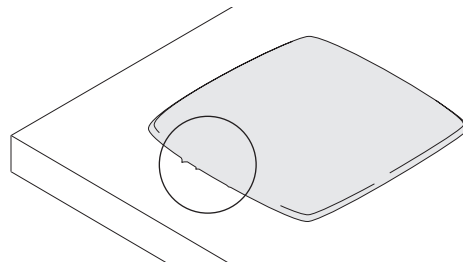


Figure 9: A thin, ragged edge (“needle-pointing”) caused by increased pulling inward at the hotter, outer edges.

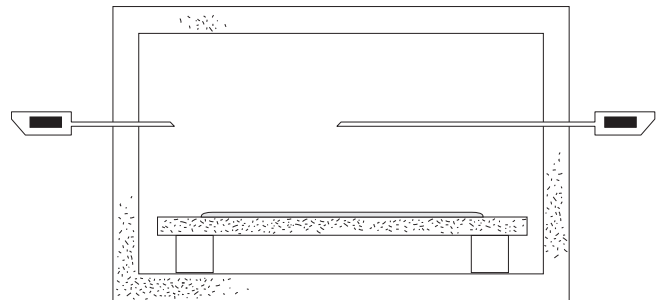


Figure 10

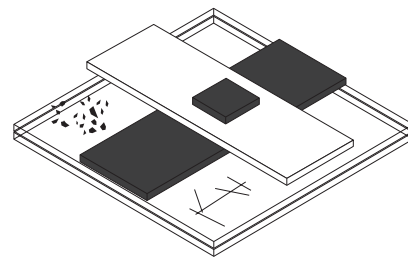


Figure 11

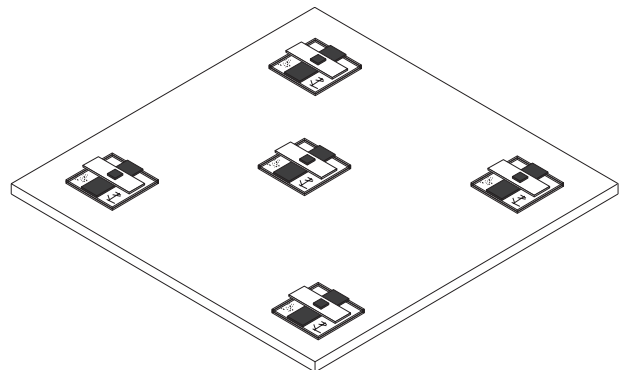


Figure 12

If the fired test tiles all have the same surface—congratulations! You have a kiln that fires evenly.

If, instead, the surfaces of the tiles are not all the same, there are ways to compensate for the variation.

ADJUSTING FOR UNEVEN FIRING AT THE HIGH END

1. Soaking your project with a longer hold at process temperature will help to even out the temperature differential. To avoid overfiring, you may need to reduce your maximum temperature by 10°F (5°C).
2. To prevent trapping air between layers when firing in a side-fired kiln, insulate or baffle the perimeter of the glass with ceramic fiber paper or brick, and/or consider adding a programmed hold somewhere in the range 1150–1250°F (621–677°C) to “squeeze” out any air from between the layers of glass.
3. Use a dense ceramic shelf. This will conduct heat well, allowing it to penetrate and escape from the bottom of the glass with ease.
4. Use a smaller kiln shelf. This will result in better heat circulation and, consequently, help to even out the temperature.
5. Make sure that your kiln shelf is not sitting on large bricks or strips. Try to minimize the amount of contact between the kiln shelf and its supports. Hollow supports are ideal.
6. Finally, if you are firing a number of different projects on one shelf, arrange them to take advantage of the heating pattern in your kiln. For example, if your kiln fires colder around the perimeter, you may want to put softer glasses to the outside and stiffer glasses to the middle of the shelf.

Remember: Understanding your kiln and the way it transfers heat to the glass is a major factor in ensuring the success of your kilnformed projects. If you find discrepancies in how uniformly your kiln heats (and therefore cools), you can make some corrections. Ultimately, however, corrections can only go so far. If your kiln is not firing uniformly, you may want to consider repairing or replacing it. The kiln is the most valuable tool (outside of yourself) that you have in your studio. A kiln that fires unevenly can result in lost time and lost work.

TEMPERATURE CONVERSION CHART

Use this table to look up a known temperature and find the corresponding temperature in °C or °F. Examples: To convert 100°F to °C, look up 100 in the center column and read the box directly to the left (38°C). To convert 100°C to °F, look up 100 in the center column and read the box directly to the right (212°F).

| °C | TEMP | °F | °C | TEMP | °F | °C | TEMP | °F |
|-----|------|-----|-----|------|------|-----|------|------|
| -12 | 10 | 50 | 210 | 410 | 770 | 432 | 810 | 1490 |
| -7 | 20 | 68 | 216 | 420 | 788 | 438 | 820 | 1508 |
| -1 | 30 | 86 | 221 | 430 | 806 | 443 | 830 | 1526 |
| 4 | 40 | 104 | 227 | 440 | 824 | 449 | 840 | 1544 |
| 10 | 50 | 122 | 232 | 450 | 842 | 454 | 850 | 1562 |
| 16 | 60 | 140 | 238 | 460 | 860 | 460 | 860 | 1580 |
| 21 | 70 | 158 | 243 | 470 | 878 | 466 | 870 | 1598 |
| 27 | 80 | 176 | 249 | 480 | 896 | 471 | 880 | 1616 |
| 32 | 90 | 194 | 254 | 490 | 914 | 477 | 890 | 1634 |
| 38 | 100 | 212 | 260 | 500 | 932 | 482 | 900 | 1652 |
| 43 | 110 | 230 | 266 | 510 | 950 | 488 | 910 | 1670 |
| 49 | 120 | 248 | 271 | 520 | 968 | 493 | 920 | 1688 |
| 54 | 130 | 266 | 277 | 530 | 986 | 499 | 930 | 1706 |
| 60 | 140 | 284 | 282 | 540 | 1004 | 504 | 940 | 1724 |
| 66 | 150 | 302 | 288 | 550 | 1022 | 510 | 950 | 1742 |
| 71 | 160 | 320 | 293 | 560 | 1040 | 516 | 960 | 1760 |
| 77 | 170 | 338 | 299 | 570 | 1058 | 521 | 970 | 1778 |
| 82 | 180 | 356 | 304 | 580 | 1076 | 527 | 980 | 1796 |
| 88 | 190 | 374 | 310 | 590 | 1094 | 532 | 990 | 1814 |
| 93 | 200 | 392 | 316 | 600 | 1112 | 538 | 1000 | 1832 |
| 99 | 210 | 410 | 321 | 610 | 1130 | 543 | 1010 | 1850 |
| 104 | 220 | 428 | 327 | 620 | 1148 | 549 | 1020 | 1868 |
| 110 | 230 | 446 | 332 | 630 | 1166 | 554 | 1030 | 1886 |
| 116 | 240 | 464 | 338 | 640 | 1184 | 560 | 1040 | 1904 |
| 121 | 250 | 482 | 343 | 650 | 1202 | 566 | 1050 | 1922 |
| 127 | 260 | 500 | 349 | 660 | 1220 | 571 | 1060 | 1940 |
| 132 | 270 | 518 | 354 | 670 | 1238 | 577 | 1070 | 1958 |
| 138 | 280 | 536 | 360 | 680 | 1256 | 582 | 1080 | 1976 |
| 143 | 290 | 554 | 366 | 690 | 1274 | 588 | 1090 | 1994 |
| 149 | 300 | 572 | 371 | 700 | 1292 | 593 | 1100 | 2012 |
| 154 | 310 | 590 | 377 | 710 | 1310 | 599 | 1110 | 2030 |
| 160 | 320 | 608 | 382 | 720 | 1328 | 604 | 1120 | 2048 |
| 166 | 330 | 626 | 388 | 730 | 1346 | 610 | 1130 | 2066 |
| 171 | 340 | 644 | 393 | 740 | 1364 | 616 | 1140 | 2084 |
| 177 | 350 | 662 | 399 | 750 | 1382 | 621 | 1150 | 2102 |
| 182 | 360 | 680 | 404 | 760 | 1400 | 627 | 1160 | 2120 |
| 188 | 370 | 698 | 410 | 770 | 1418 | 632 | 1170 | 2138 |
| 193 | 380 | 716 | 416 | 780 | 1436 | 638 | 1180 | 2156 |
| 199 | 390 | 734 | 421 | 790 | 1454 | 643 | 1190 | 2174 |
| 204 | 400 | 752 | 427 | 800 | 1472 | 649 | 1200 | 2192 |

WATCH OUT!

Use the table above only to convert specific temperatures.

Do not use it to convert heating and cooling rates. If you apply the temperatures listed on a conversion chart to a heating or cooling rate, you will always be 32° off.

For example, if you fire at a rate of 600°F per hour (DFPH) to 1270°, you will arrive at 1270° in 2 hours (2:00). If you convert 600°F to 316°C per hour (DCPH) and fire to 688°C, you will arrive at 688°C in 2 hours and 10 minutes (2:10), or 10 minutes slower.

To convert a Fahrenheit rate to centigrade, simply divide the Fahrenheit number by 1.8. Conversely, to change a centigrade rate to Fahrenheit, multiply by 1.8.